



AV	Scart connector
On/Off	On/Off
EXIT	Exit menu
Mute	Mute
+ V -	Adjust volume
OK	OK/Enter
▲◀▶▼	Menu up/left/right/down
MENU	Menu selection
+ P -	Scroll channels in sequence

3

lynx

ENGLISH

Direct Programming

- Keep the keys **V+** and **V-** pressed down until the led stays lighted; then let go of the keys.
- Press the **▲** key down as many times as the figure to be entered (0: do not press; 1: press once; 2: press twice.....).
- Press the **OK** key to confirm the figure and to move on to the next.
- Repeat points b and c until the code is completed (three digits); the led will blink twice to confirm.

EXAMPLE: if the code to be entered is 103, then: Push the **▲** key once to enter 1; push **OK** to confirm and to move on to the next figure. Push **OK** to enter the 0 and to move on to the next figure. Press the **▲** key three times to enter the 3; push **OK** to confirm and to move on to the next figure. The led will blink twice to confirm entry of the figure.

If the direct programming does not work:



Automatic Programming

- Turn on the TV.
- Keep the keys **V+** and **V-** pressed down until the led stays lit, then let go of the keys.
- With the remote control pointed towards the TV, press the **☺** key; let go of the key.
- As soon as the TV goes off, push any one of the keys on the remote control keyboard to memorise the code.

Visualising the active code

- Keep the keys **V+** and **V-** pressed down until the led stays lighted, then let go of the keys.
- Press the **MENU** key; let go of the key. The led will start blinking, displaying the active code.

EXAMPLE: if the code 103 has been entered, then: first the led will give a short blink, indicating 1, followed by a long blink for 0 and, finally, three short blinks for 3.

LYNX Simple Remote Control